
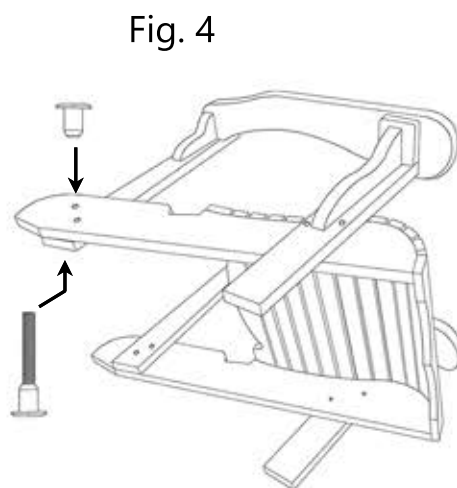
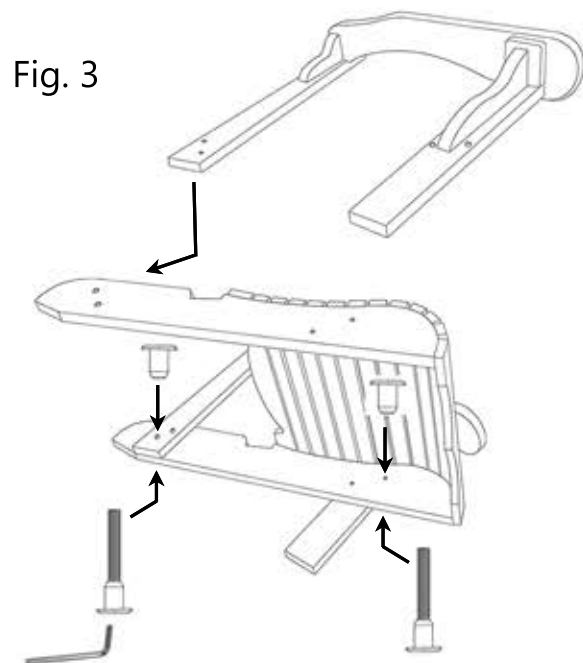
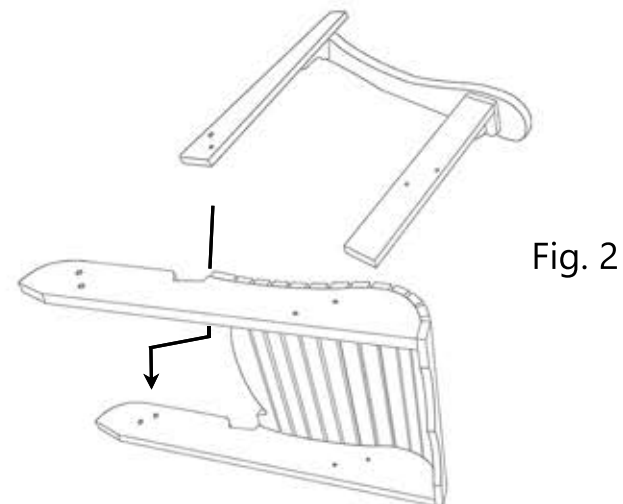


# ASSEMBLY INSTRUCTION

AD-045

NAUTICAL ADIRONDACK

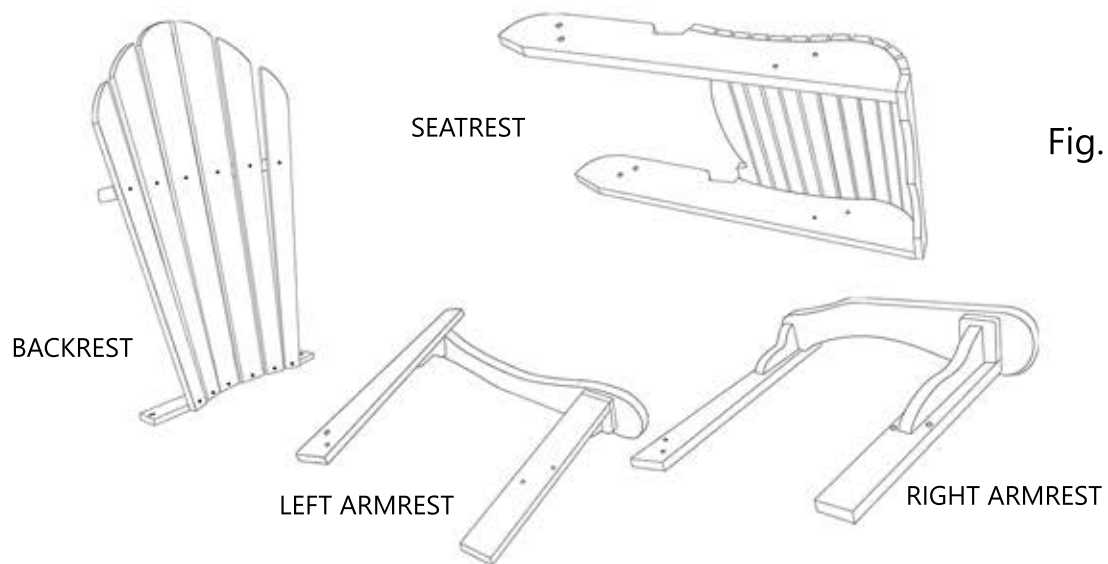

PAGE 1

**Parts :** 2 pcs Armrests (Right-Left), 1 pc Backrest,  
1 pc Seatrest

**Hardware :**  
Bolts for seatrest, Bolts for backrest

**Tool Requirement :**  
Allen key, screwdriver

**Assembling :**  
1. Assembly left armrest and seatrest. (Fig.2)  
2. Insert the bolts for seatrest and fasten it using  
allen key. Assembly the other armrest. (Fig.3)  
3. Insert the bolts. (Fig. 4)  
3. Insert the backrest. (Fig. 5)  
4. Fasten the backrest using bolts. (Fig. 6)