

ASSEMBLY INSTRUCTION

DS-701

NATSEPA CENTER MODULAR DEEP SEATING

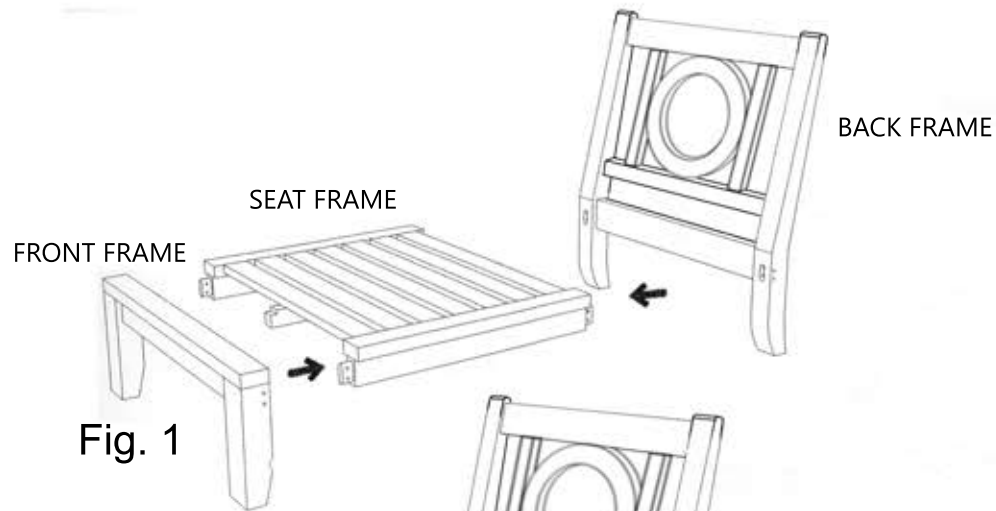


Fig. 1



Fig. 2

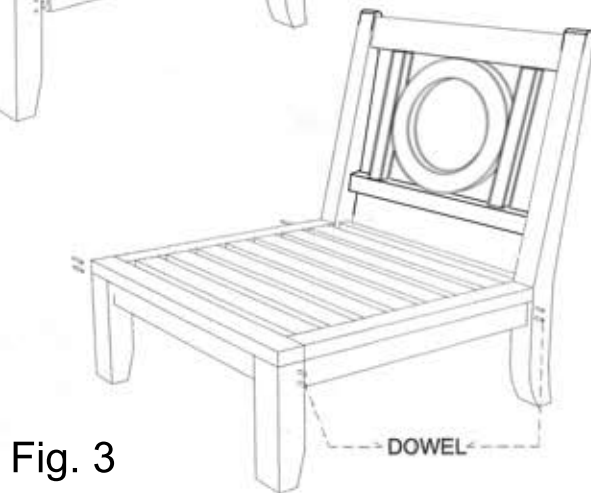


Fig. 3


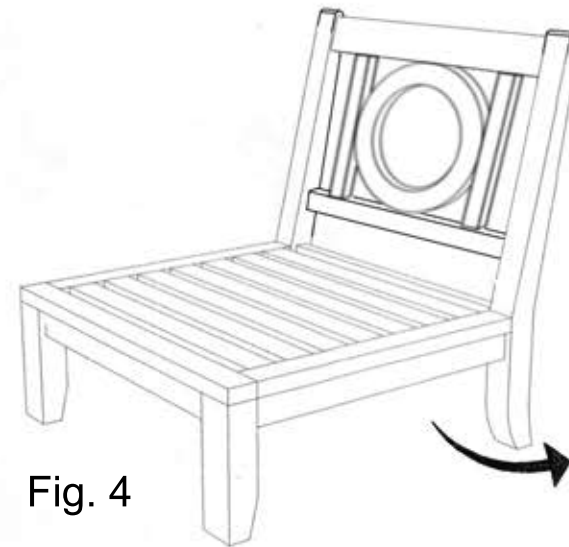


Fig. 4

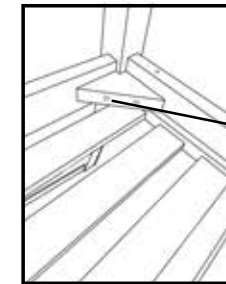

Wood Screw
(underneath the seat)

Part List :

1 pc SEAT frame, 1 pc BACK frame, 1 pc FRONT frame

Assembling :

1. PREPARE PART TO BE ASSEMBLED ACCORDING TO POSITION (FRONT-BACK) (FIG.1)
2. INSERT GLUE INSIDE THE TENON, THEN JOIN THE BACK FRAME TO THE SEAT FRAME THEN JOIN TO THE FRONT FRAME AS PARTS NUMBER (FIG.2)
3. INSERT THE DOWELS WITH GLUE PART AS PARTS NUMBER (FIG.3)
4. FASTEN THE WOOD BRACES (UNDERNEATH THE SEAT) USING WOOD SCREWS. USE A PHILIP SCREWDRIVER. (FIG.4)